

## CHANGING THE CARTRIDGE IN YOUR QETTLE BOILING WATER TAP

### PREPARATION

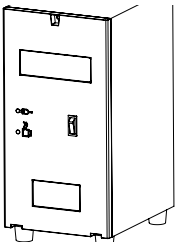
No special tools are needed to replace your filter cartridge. All you will need is a suitable receptacle to catch any spillage and a cloth or a sponge handy. A rubber glove is provided to hold the wet cartridge.

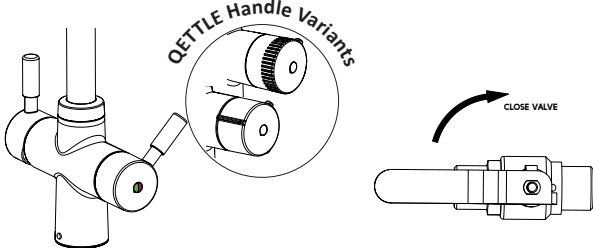
### LUBRICATING THE RUBBER SEALS

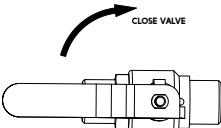
To maintain the smooth operation of the unit and ease reassembly, we recommend that a film of silicone grease is applied to the filter housing's 'O' seal at least every other time the cartridge is changed. Small tubes of WRAS approved silicone grease can be purchased from QETTLE [qettle.com](http://qettle.com)

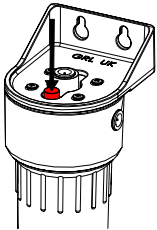
### DISPOSING OF THE SPENT CARTRIDGE

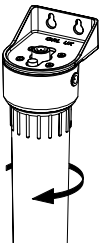
You may dispose of the cartridge in your normal household waste. The carbon components of the Q08 filter cartridge are biodegradable. You are welcome to return either the plastic parts or the complete cartridge to QETTLE for recycling. Should you decide to return the cartridge please allow it to dry naturally and return it in the original packaging.

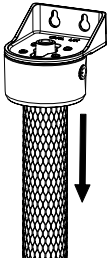
- 

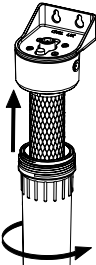
1. Operate the switch on the front of the boiler to switch off the boiler power supply.
- 

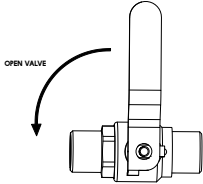
2. Drain the system of boiling water by running the boiling water until it runs cold.
- 

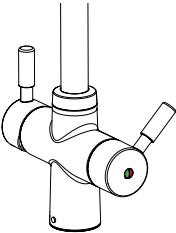
3. Shut off the water supply to the filter using the adjacent stop-valve.
- 

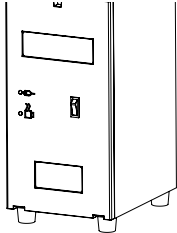
4. Press the red button at the top of the filter unit to exhaust the pressure in the system. It will not be possible to unscrew the filter canister if this operation is not carried out. PLEASE NOTE, if you do not have a red button, turn on the boiling water again to release the pressure.
- 

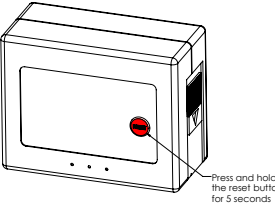
5. Place a shallow container in the cabinet to catch any water residues when removing the filter sump. Grip the sump firmly and turn it firmly to the left to break the seal. Unscrew the sump by hand until it separates from the head of the filter.
- 

6. If the old cartridge does not automatically fall free press down on the top mount of the cartridge to release it. Remove the old cartridge and discard the remaining water in the sump.
- 

7. Remove the new filter cartridge from its packaging, wet the "O" seal and place it in the filter sump. Position the sump, with the cartridge inside, under the filter head and screw it in place. The cartridge should engage automatically. Tighten the sump, sufficient to make a water tight seal.
- 

8. Turn the water supply 'on' and check the system carefully for leaks. Turn the filtered cold water to the 'on' position (if you have a 3-in-1 system, turn the boiling water on) and allow the water to run for approximately 10 minutes to flush the system. IMPORTANT NOTE: The optimum flow rate is 2 litres per minute. The performance of the filter will be negatively affected if the flow rate is too fast. If necessary, the flow rate can be regulated by adjusting the stop valve.
- 

9. Operate the system and run the boiling water for a few moments until the water runs clear. Run the boiling water for a moment to release any trapped air.
- 

10. Turn the boiler power supply back on.
- 

11. If you have a filter change indicator module, press and hold the reset/ filter timer button for 5 seconds until you hear an audible beep. The filter change indicator is now reset.

**QETTLE**

Pinewood Farm  
 Shorthorn Road  
 Stratton Strawless  
 NORWICH  
 NR10 5NT  
 Phone: +44 (0)1603 875464  
 Email: [support@qettle.com](mailto:support@qettle.com)