



CHANGING THE CARTRIDGE IN YOUR QETTLE BOILING WATER TAP

PREPARATION

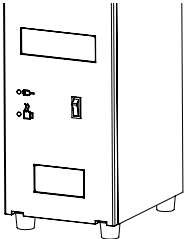
No special tools are needed to replace your filter cartridge. All you will need is a suitable receptacle to catch any spillage and a cloth or a sponge handy.

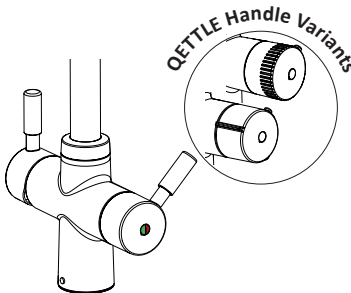
LUBRICATING THE RUBBER SEALS

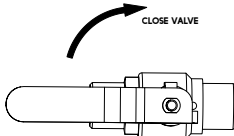
To maintain the smooth operation of the unit and ease reassembly, we recommend that a film of silicone grease is applied to the filter housing's 'O' seal at least every other time the cartridge is changed. Small tubes of WRAS approved silicone grease can be purchased from QETTLE www.qettle.com

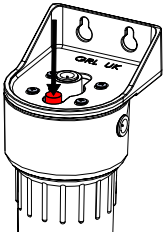
DISPOSING OF THE SPENT CARTRIDGE

 
You may dispose of the cartridge in your normal household waste. The carbon components of the Q08 filter cartridge are biodegradable. However, your local council recycling facilities are unable to recycle them. You are welcome to return your cartridge to QETTLE for recycling but we do ask that you cover the return postage. If you wish to do this, simply allow the old cartridge to dry naturally, repack it in the new cartridge packaging and return it to QETTLE.

 
- 

 
1. Operate the switch on the front of the boiler to switch off the boiler power supply.
- 

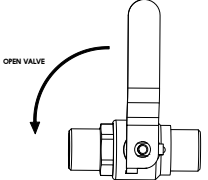
2. Drain the system of boiling water by running the boiling water until it runs cold.
- 

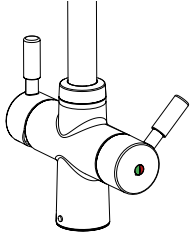
3. Shut off the water supply to the filter using the adjacent stop-valve.
- 

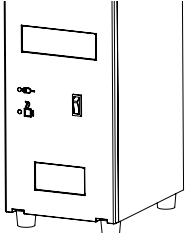
4. Press the red button at the top of the filter unit to exhaust the pressure in the system. It will not be possible to unscrew the filter canister if this operation is not carried out.
- 

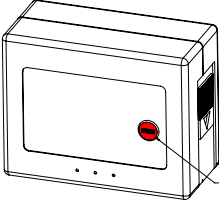
5. Place a shallow container in the cabinet to catch any water residues when removing the filter sump. Grip the sump firmly and turn it firmly to the left to break the seal. Unscrew the sump by hand until it separates from the head of the filter.
- 

6. If the old cartridge does not automatically fall free press down on the top mount of the cartridge to release it. Remove the old cartridge and discard the remaining water in the sump.
- 

7. Remove the new filter cartridge from its packaging, wet the "O" seal and place it in the filter sump. Position the sump, with the cartridge inside, under the filter head and screw it in place. The cartridge should engage automatically. Tighten the sump, sufficient to make a water tight seal.
- 

8. Turn the water supply 'on' and check the system carefully for leaks. Turn the filtered cold water to the 'on' position and allow the water to run for approximately 10 minutes to flush the system. **IMPORTANT NOTE:** The optimum flow rate is 2 litres per minute. The performance of the filter will be negatively affected if the flow rate is too fast. If necessary the flow rate can be regulated by adjusting the stop valve.
- 

9. Operate the boiling water and allow the water to run for a few moments to release any trapped air.
- 

10. Turn the boiler power supply back on.
- 

11. Press and hold the reset button on the filter change indicator module for 5 seconds. The LED light on the tap will glow red, followed by yellow, and then the module will emit an audible beep. The filter change indicator is now reset.

QETTLE

Old Winery Business Park
Chapel Street
Cawston
Norfolk
NR10 4FE
Phone: +44 (0)1603 875464
Email: support@qettle.com



CHANGING THE CARTRIDGE IN YOUR QETTLE INSTANT HOT WATER TAP

PREPARATION


No special tools are needed to replace your filter cartridge. All you will need is a suitable receptacle to catch any spillage and a cloth or a sponge handy.

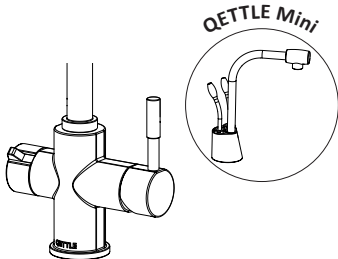
LUBRICATING THE RUBBER SEALS

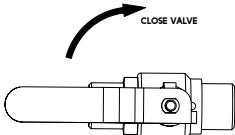
To maintain the smooth operation of the unit and ease reassembly, we recommend that a film of silicone grease is applied to the filter housing's 'O' seal at least every other time the cartridge is changed. Small tubes of WRAS approved silicone grease can be purchased from QETTLE www.qettle.com

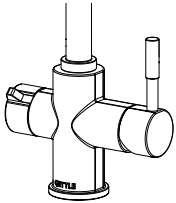
DISPOSING OF THE SPENT CARTRIDGE

 
You may dispose of the cartridge in your normal household waste. The carbon components of the Q08 filter cartridge are biodegradable. You are welcome to return your cartridge to QETTLE for recycling but we do ask that you cover the return postage. If you wish to do this, simply allow the old cartridge to dry naturally, repack it in the new cartridge packaging and return it to QETTLE.

 
- 

 
1. Operate the switch on the front of the boiler to switch off the boiler power supply.
- 

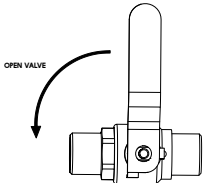
2. Drain the system of boiling water by running the boiling water until it runs cold.
- 

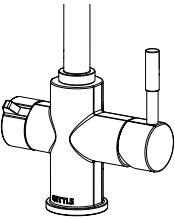
3. Shut off the water supply to the filter using the adjacent stop-valve.
- 


4. Turn on the boiling water again to release the pressure in the system. **IMPORTANT NOTE:** If you do not follow this step the pressure trapped in the system will make it impossible to unlock the filter housing sump from the head.
- 

5. Place a shallow container in the cabinet to catch any water residues when removing the filter sump. Grip the sump firmly and turn it firmly to the left to break the seal. Unscrew the sump by hand until it separates from the head of the filter.
- 

6. If the old cartridge does not automatically fall free press down on the top mount of the cartridge to release it. Remove the old cartridge and discard the remaining water in the sump.
- 

7. Remove the new filter cartridge from its packaging, wet the "O" seal and place it in the filter sump. Position the sump, with the cartridge inside, under the filter head and screw it in place. The cartridge should engage automatically. Tighten the sump, sufficient to make a water tight seal.
- 

8. Turn the water supply 'on' and check the system carefully for leaks.
- 

9. Turn the boiling water tap to 'on' position and allow the water to run for approximately 10 minutes to flush the system. **IMPORTANT NOTE:** The optimum flow rate is 2 litres per minute. The performance of the filter will be negatively affected if the flow rate is too fast. If necessary the flow rate can be regulated by adjusting the stop valve.
- 

10. Turn the boiler power supply back on.

QETTLE

Old Winery Business Park
Chapel Street
Cawston
Norfolk
NR10 4FE
Phone: +44 (0)1603 875464
Email: support@qettle.com